

WEBRelay™

WebRelay™ Quick Start Guide

Basic Setup Steps:


- (1) Connect unit to power and network.
- (2) Set up a computer on the same network as the module. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
- (3) Configure the WebRelay™ using web browser. Do this by pointing browser to <http://192.168.1.2/setup.html>. Username is **admin** and password is **webrelay** (all lower case).
- (4) Set the permanent IP address in the configuration page. Restart the WebRelay™ (remove power, re-apply power). After restarting the unit, set the computer back to its original settings and access the WebRelay™ at its new IP address.
- (5) Connect relay contacts.

Factory Default Settings

IP Address: 192.168.1.2
Subnet Mask: 255.255.255.0
Control Web Address: <http://192.168.1.2>
Setup Web Address: <http://192.168.1.2/setup.html>
Setup Username: admin
Setup Password: webrelay (all lower case)
Control Password: no password set

Full Users Manual may be downloaded from
<http://www.ControlByWeb.com>


For technical support, email questions to
support@ControlByWeb.com

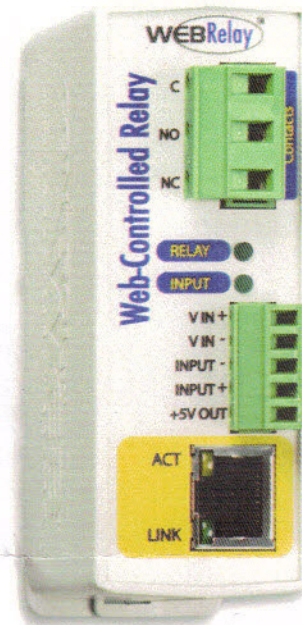

Pinout

C : Relay Contact Common
NO : Relay Contact Normally Open
NC : Relay Contact Normally Closed

V IN+ : Power Supply Input (+)
V IN- : Power Supply Input (-)
INPUT - : Optically-Isolated Input (-)
INPUT + : Optically-Isolated Input (+)
+5V OUT : 5VDC Output (50mA Max)

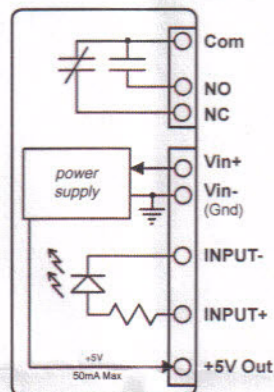

Note: The WebRelay™ can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended.

CONTROL by WEB™
www.ControlByWeb.com
a division of...
Xytronix Research & Design, Inc.
Nibley, Utah, USA